
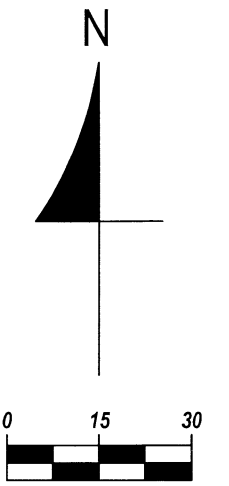
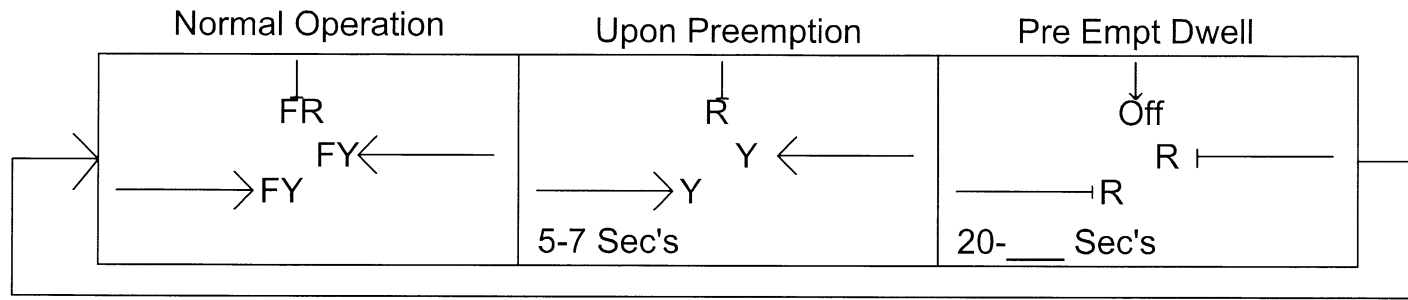


Signal/Sign Details

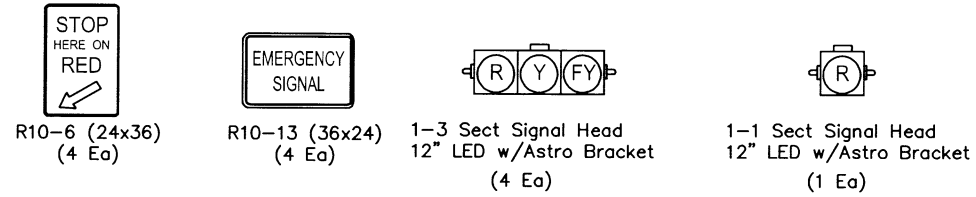

Note:  
 Controller shall receive PE Signal from either wall mounted push button or wireless button in Fire Truck.


Install Preempt Button on Wall Adjacent to Garage Door Switch Enter into Existing Junction Box. Run Shielded Loop Wire to Controller.

Pick Up and Extend Power to Controller From Electrical Closet Install 10 Amp Breaker in Existing Panel.

2-2" PVC Conduits Shielded Wire [PE Button] 3-#12 AWG Power Cable


Signal Controller w/Hardwire and Wireless PE Actuation

W11-8  
 Approx. 200' From Stop Bar

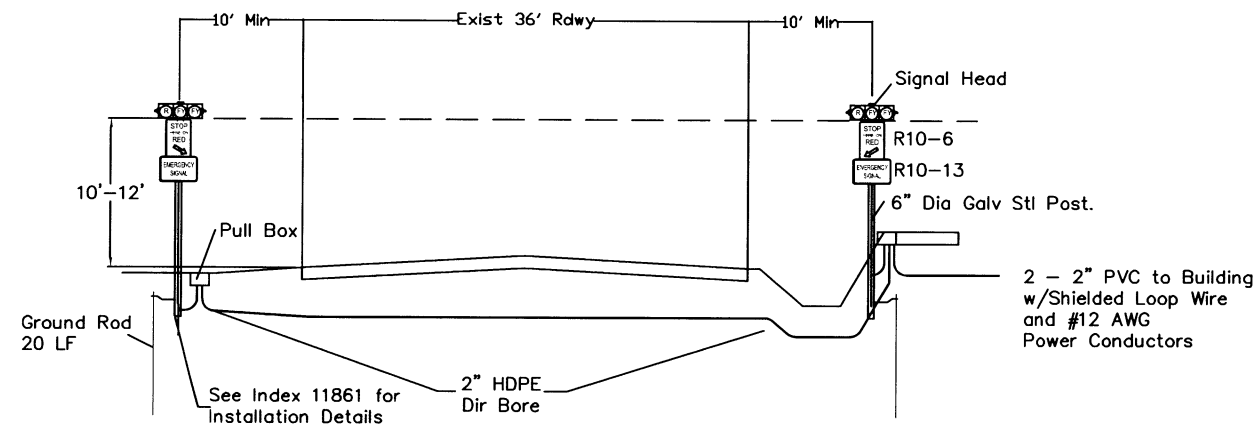


Typical Section Facing West

Signal/Sign Assembly on 6" Galv Stl Post (Typ) See Details above 4 Each Required

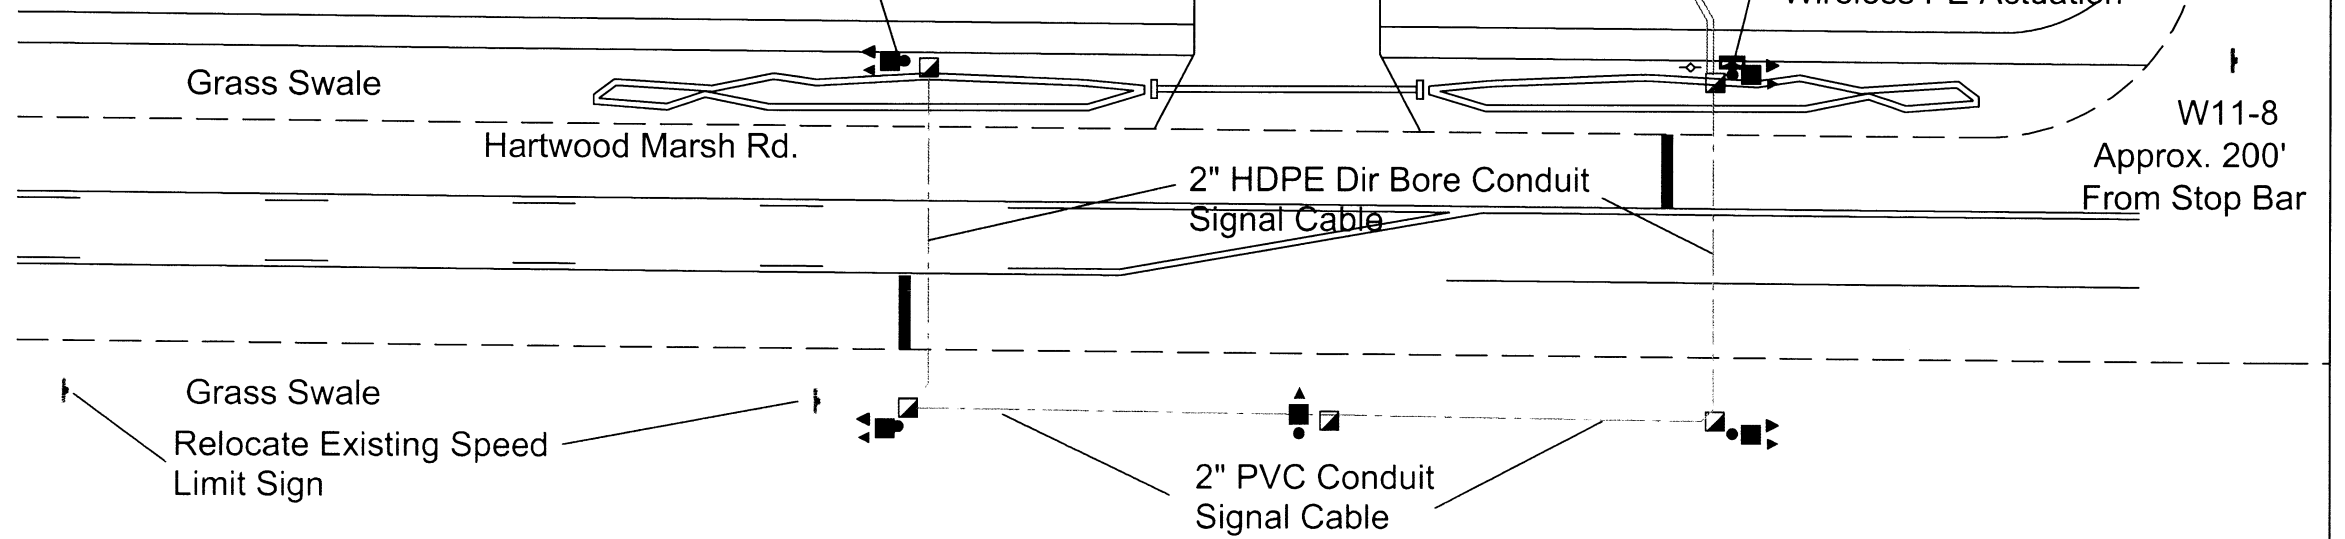

F:\Engineering Data Files\MARKETING\file name.dwg

REVISIONS		
DATE	BY	DESCRIPTION

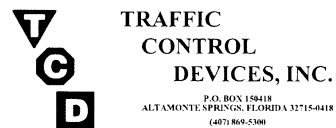

STATE OF FLORIDA DEPARTMENT OF TRANSPORTATION		
ROAD NO.	COUNTY	FINANCIAL PROJ. ID

**Clermont FS No. 2**

SHEET NO.  
**Sh #**